


XPLOR
PH14 Headlamp
Instruction Manual





2a-2c

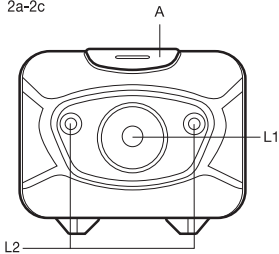

Getting to know your headlamp

(A) Main button

(L1) Main light

(L2) Red light (2 x red LED)

1. Fitting batteries

- 1a. Check the headlamp is off before opening battery compartment.
- 1b. Remove old batteries and insert new batteries following the polarity markings (+) and (-) on the battery compartment.
- 1c. Close battery compartment.

2. Operation

2a. Main light - Cool white (L1)

Short press (A) to cycle through light modes	Main light on: High → Medium → Low → Off
--	--

When (L2) is on, press (A) 3 times to switch to (L1)	Main light on
--	---------------

2b. Red lights (L2)

When (L1) is off, long press (A) for 2 seconds	Red lights on
--	---------------

When (L2) is on, short press (A)	Flashing red lights → Off
----------------------------------	---------------------------

2c. Other operations

When (L1) and (L2) are off, long press (A) for >5 seconds	Lock mode activated (L1 flashes twice) In lock mode, (L1) flashes momentarily when (A) is pressed.
---	---

When lock mode activated, long press (A) for >5 seconds	Lock mode deactivated (L1 flashes twice)
---	--

3. Specifications

Lumen	200 lm – 5 lm	Impact resistance	1.0 m
Candela	Max. 3850 cd	Battery	Alkaline/NiMH (3 x AAA)
Beam distance	Max. 120 m	LED	Cree (White) & Red LED
Runtime	7 h – 78 h	Weight	110g (with batteries)
IP rating	IPX6	Dimensions	46 x 56 x 34 mm